


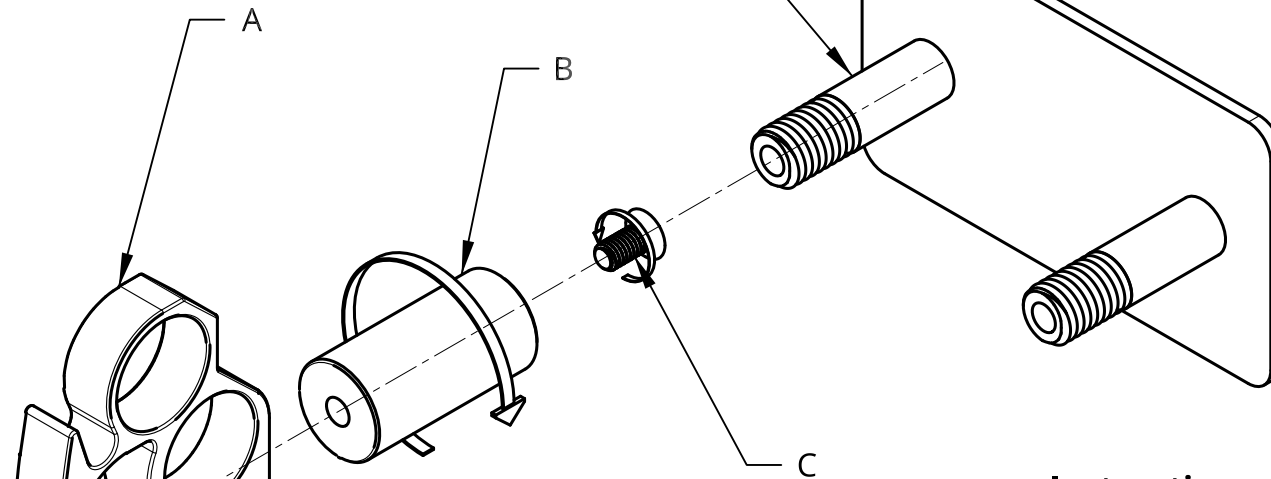


No.	DESCRIPTION	QTY in Kit
A	Aluminum Knuckle Style Grip	1
B	Thread-on Adapter	1
C	M6 X 1, 12mm Long Flat Head Screw	1

Standard Threaded  
Dash Air Valve



### Instructions

1. Detach the top chrome knuckle (A) from the thread-on adaptor (B) by removing the screw (C) from the inside of the thread-on adaptor (B).
2. Screw the thread-on adaptor (B) onto the air valve.
3. Once the position of the thread-on adaptor (B) is finalized, mark the desired location for the chrome knuckle.
4. Unscrew the thread-on adaptor (B), align the chrome knuckle (A) and the thread-on adaptor (B). Tighten the screw (C), threadlock is highly recommended for a more permanent fit.
5. Screw the completed unit onto the air valve.

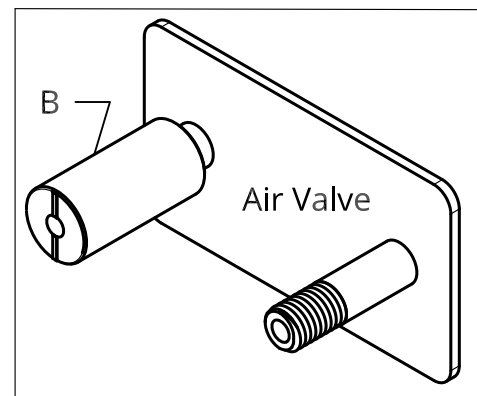

Item No. 23526 & 23527  
Product Name:  
KNUCKLE STYLE AIR VALVE KNOB

Rev No. 06172020