




United Pacific

**LOW ROOF
FOR 2004+ PETERBILT 379**
Item Number: 28009

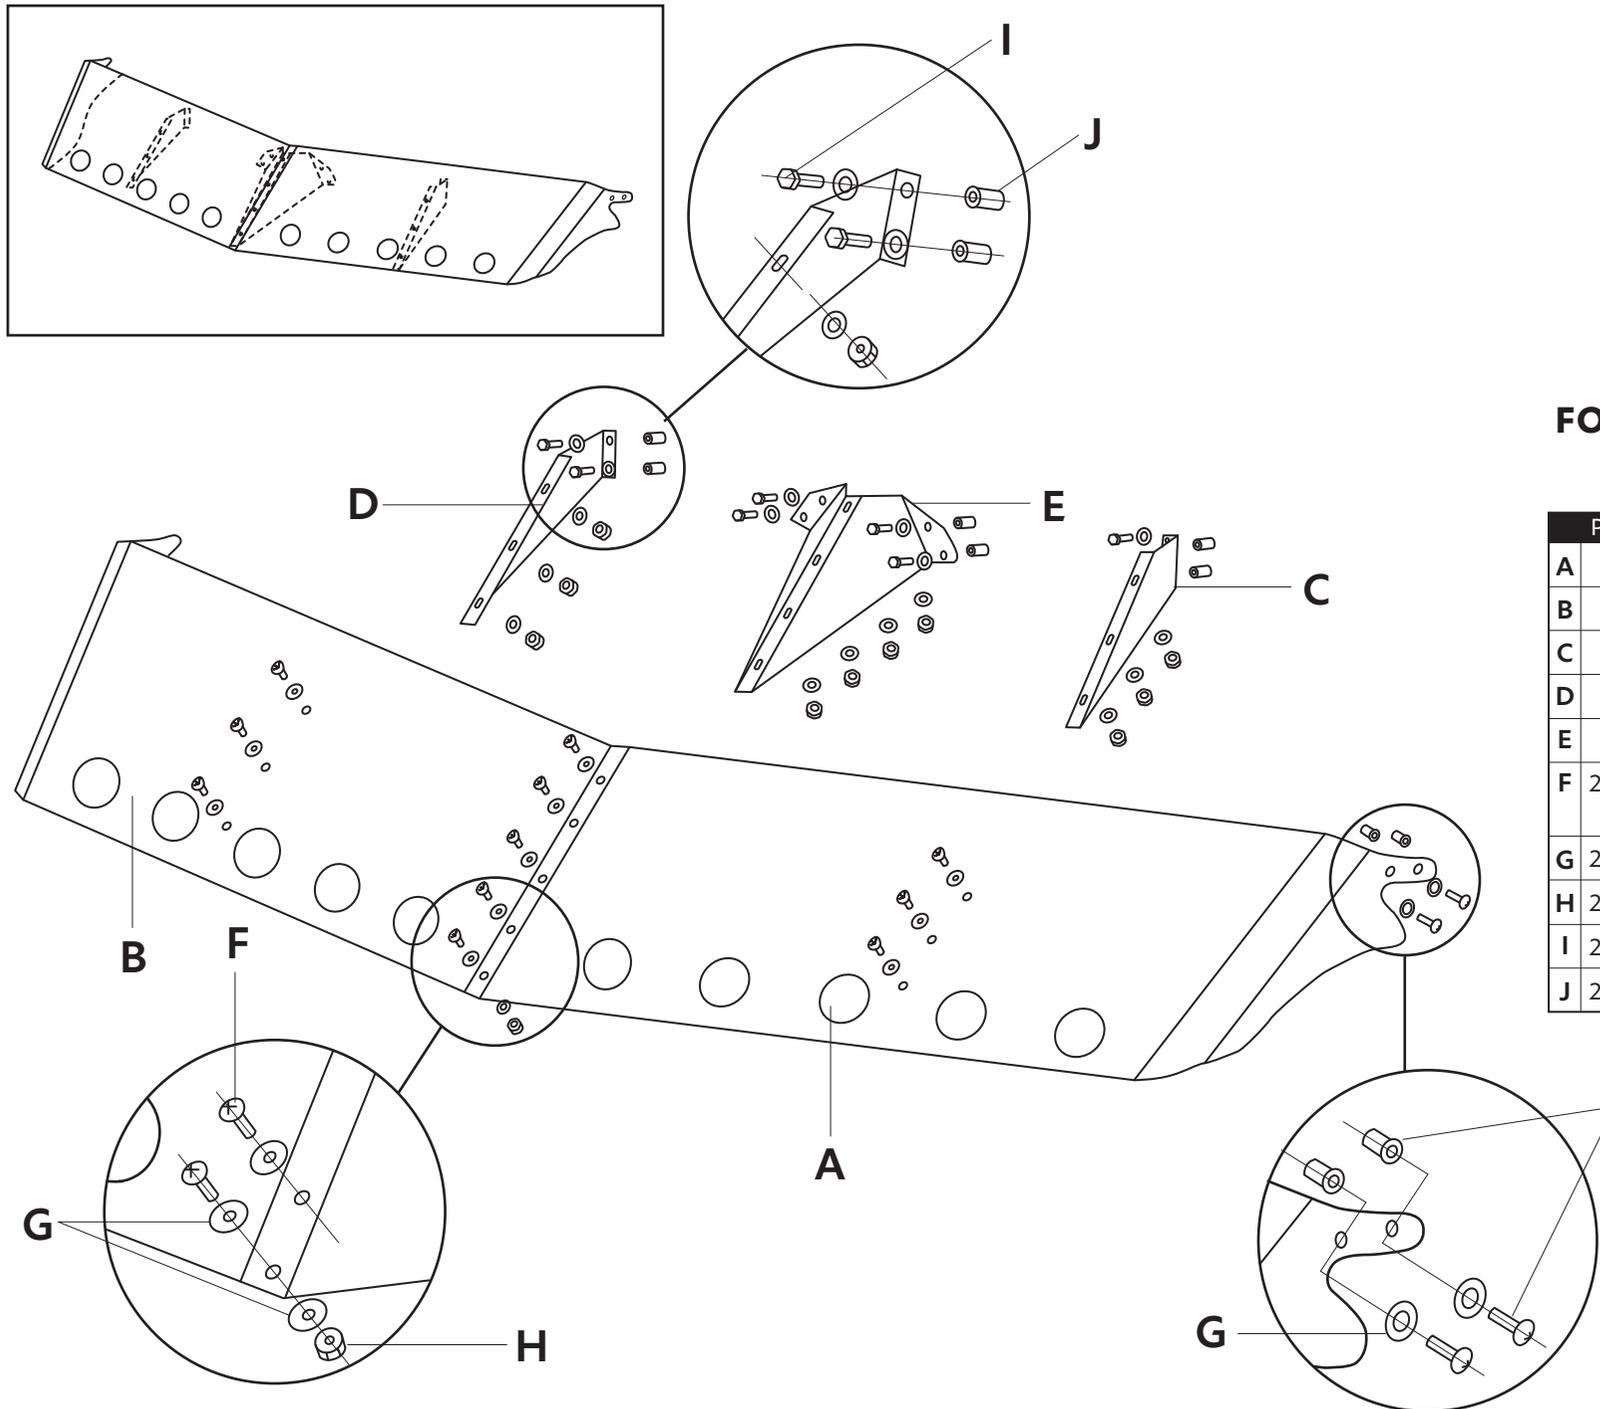


| PART # | COMPONENTS | QTY |
|--------|---|-----|
| A | Driver Visor | 1 |
| B | Passenger Visor | 1 |
| C | Driver Bracket | 1 |
| D | Passenger Bracket | 1 |
| E | Center Bracket | 1 |
| F | 28009-1 Truss HD. Screw 1/4NC x 3/4" | 12 |
| G | 28009-2 Flat Washer 1/4 | 34 |
| H | 28009-4 Hex. Nut 1/4NC | 12 |
| I | 28009-5 Hex. Bolt 1/4NC x 1 1/4" | 8 |
| J | 28009-6 Well Nut 1/4NC | 8 |


**USE ORIGINAL
HARDWARE**

INSTALLATION INSTRUCTION Item Number: 28009


1. Remove original factory sun visor and brackets. Attach the left and right visor. Fasten the 2 halves together with the 1/4NC x 3/4" screw.

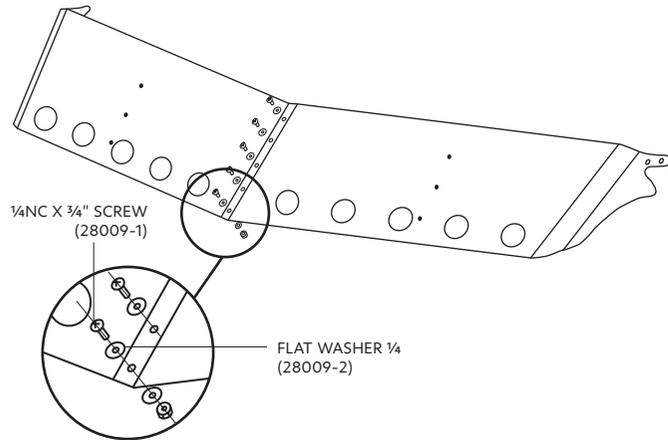

2. Feed the 1/4NC x 3/4" screw through the six remaining openings.

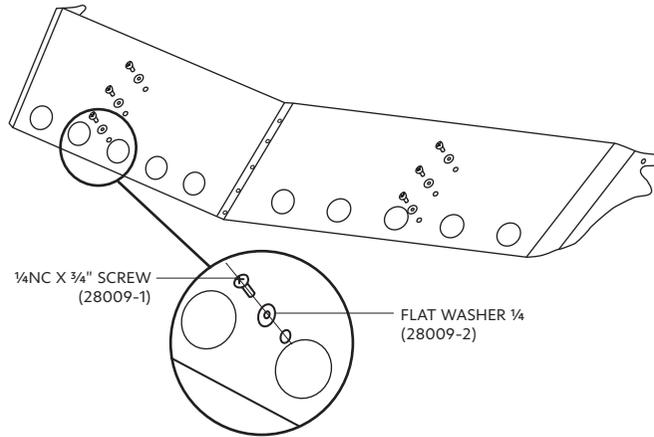




3. Attach the 3 supporting brackets to the sun visor. Please take note for each brackets position.

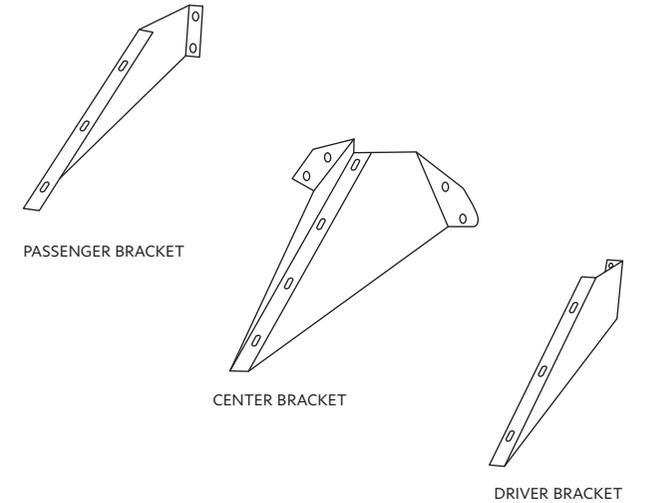

4. Fasten each screw to the bracket with a 1/4 hex nut on the back side of the bracket.

5. Attach the brackets to the cab with the 1/4NC x 1 1/4" hex bolt. Feed the 1/4NC x 1 1/4" hex bolt and a 1/4 flat washer through each hole of the bracket. Fasten the hex bolts with the 1/4NC well nut on the back.

6. Fasten the sides of the sun visor to the cab with original screws. Feed the original screws and 1/4 flat washer through each of the 4 holes. Tighten with the original well nuts.

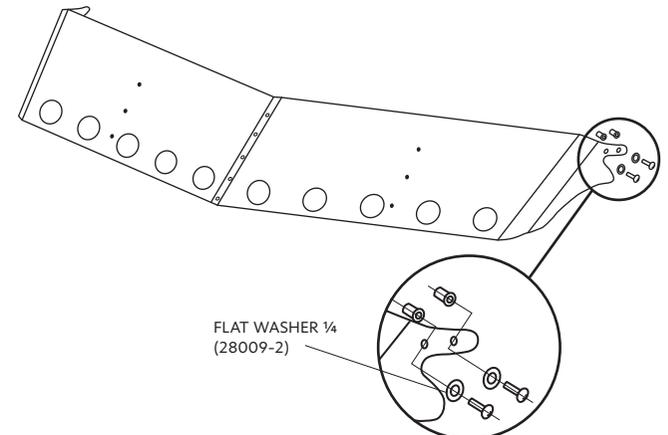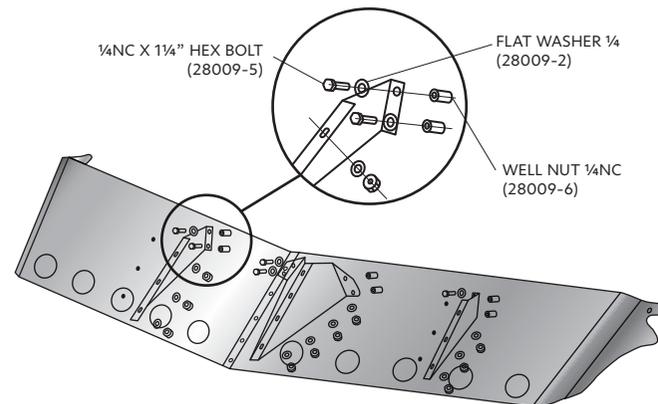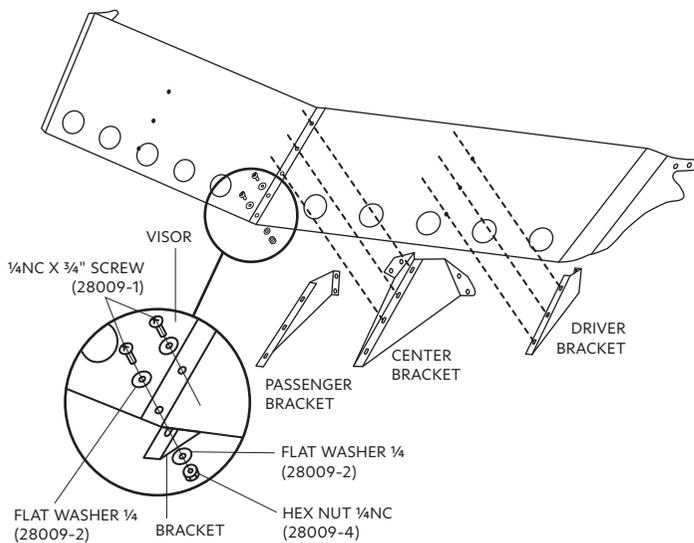

* Depending on the year of the truck, holes may need to be drilled on the front of the cab for proper installation