



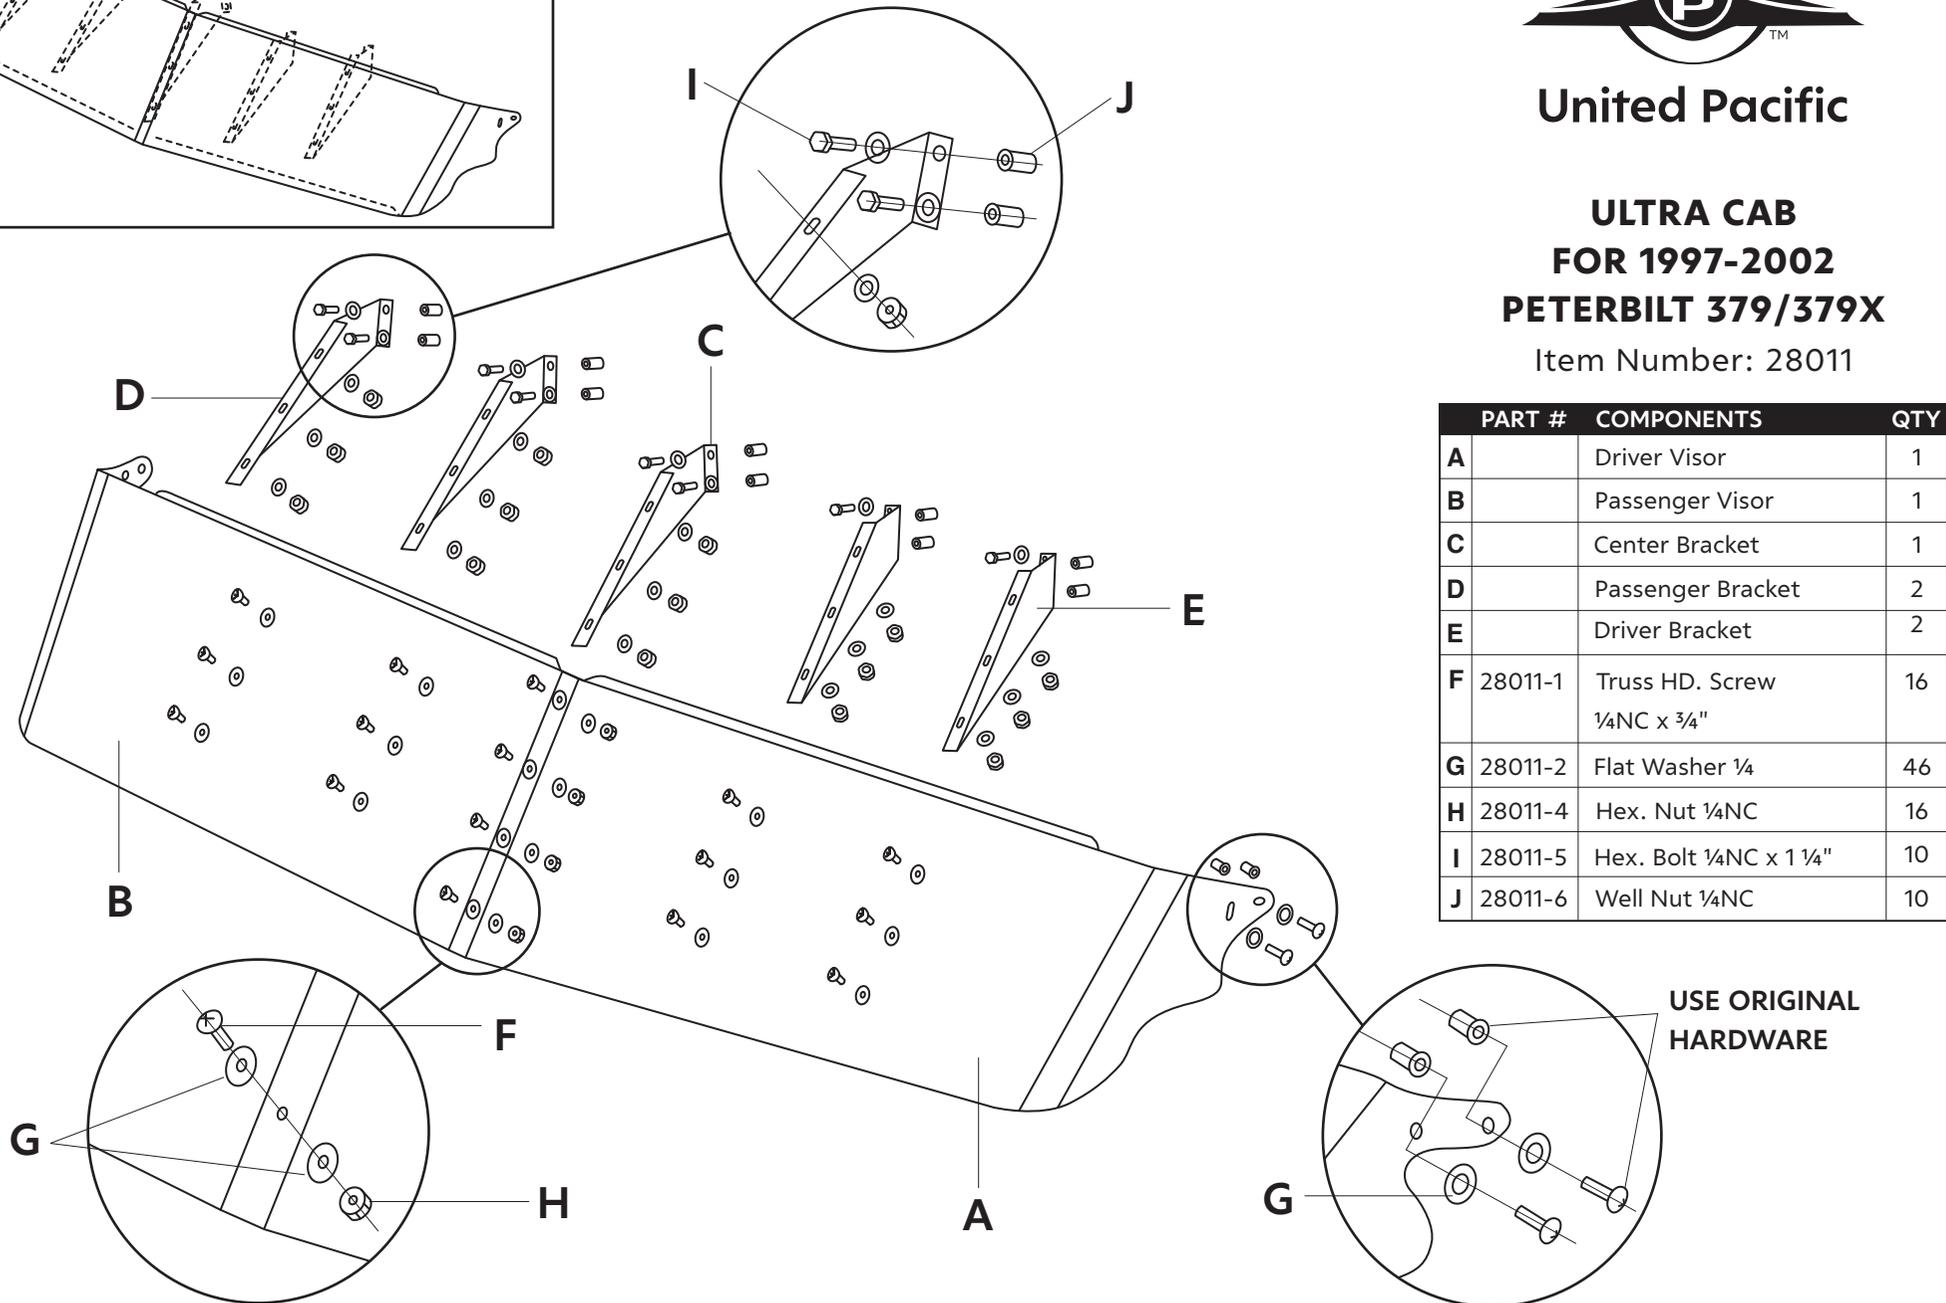

United Pacific

**ULTRA CAB
FOR 1997-2002
PETERBILT 379/379X**

Item Number: 28011

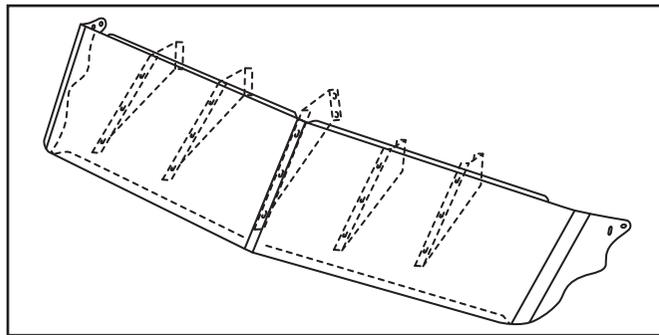


PART #	COMPONENTS	QTY
A	Driver Visor	1
B	Passenger Visor	1
C	Center Bracket	1
D	Passenger Bracket	2
E	Driver Bracket	2
F	28011-1 Truss HD. Screw 1/4NC x 3/4"	16
G	28011-2 Flat Washer 1/4	46
H	28011-4 Hex. Nut 1/4NC	16
I	28011-5 Hex. Bolt 1/4NC x 1 1/4"	10
J	28011-6 Well Nut 1/4NC	10


**USE ORIGINAL
HARDWARE**

INSTALLATION INSTRUCTION Item Number: 28011


1. Remove original factory sun visor and brackets. Attach the left and right visor. Fasten the 2 halves together with the 1/4NC x 3/4" screw.

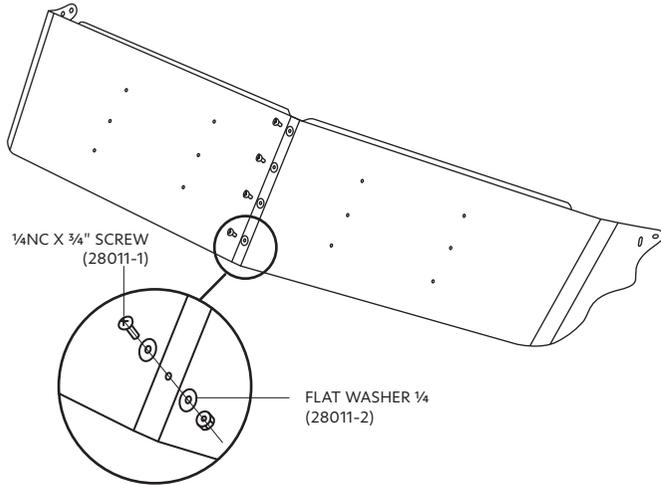


2. Feed the 1/4NC x 3/4" screw through the twelve remaining openings.

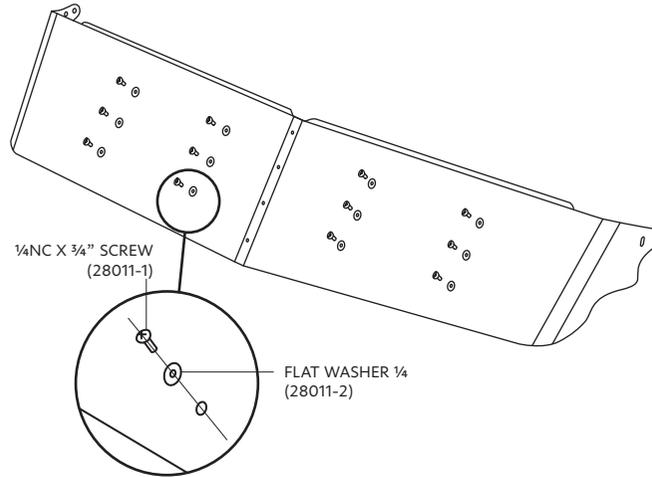


3. Attach the supporting brackets to the sun visor. Please take note for each brackets position.

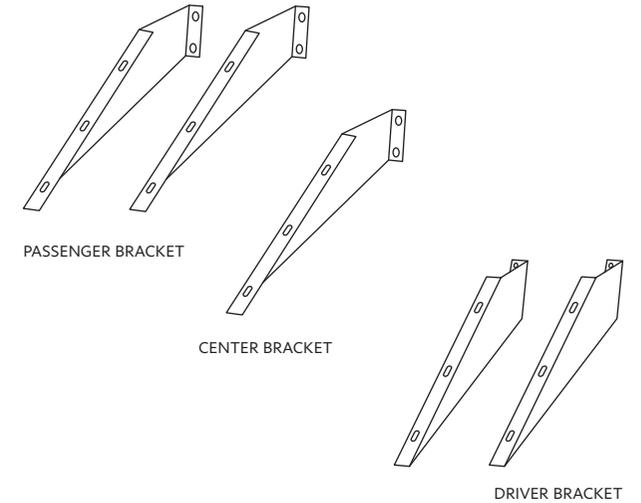


4. Fasten each screw to all brackets with a 1/4 lock washer and 1/4 hex nut on the back side of the bracket.

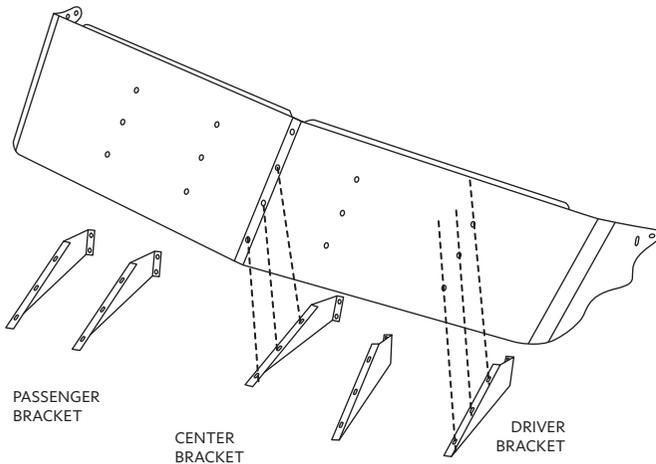

5. Attach the brackets to the cab with the 1/4NC x 1 1/4" hex bolt. Feed the 1/4NC x 1 1/4" hex bolt and a 1/4 flat washer through each hole of the bracket. Fasten the hex bolts with the 1/4NC well nut on the bracket.

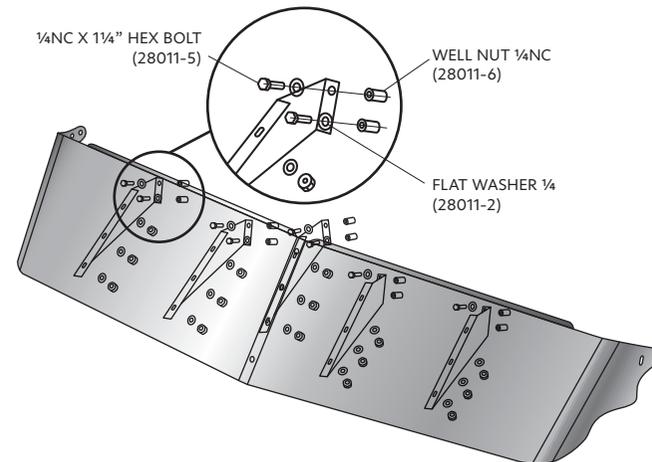

6. Fasten the sides of the sun visor to the cab with the original sunvisor hardware. Feed the original screw and 1/4 flat washer through each of the 4 holes with original well nuts.

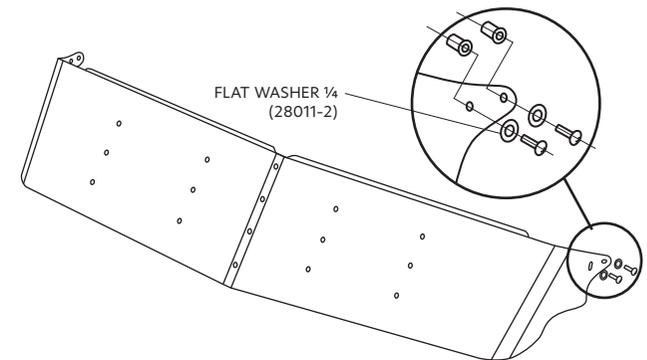

* Depending on the year of the truck, holes may need to be drilled on the front of the cab for proper installation