


Stainless Steel Accessories


Kenworth air intake shrouds installation instructions

11/19/2020

- Using masking tape, tape off the surface of the hood in the area where the shrouds will be installed. The masking tape will provide a suitable surface for marking desired drilling locations, as well as protect the paint finish during the drilling process.
- Proceed to take measurements as shown in the pictures below in order to mark the desired mounting bolt locations. A pen can be used to mark these locations on the masking tape.

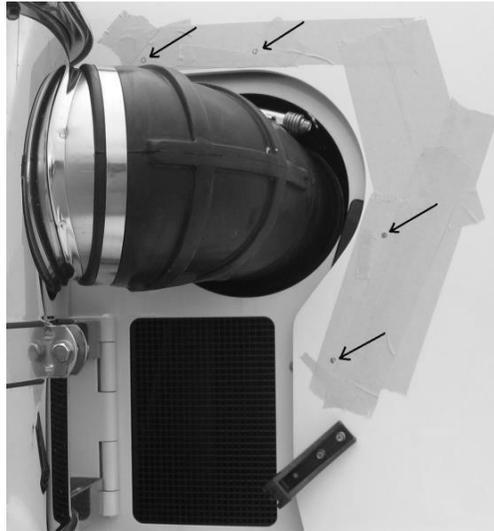

Four mounting hole locations are required as shown in the picture above.

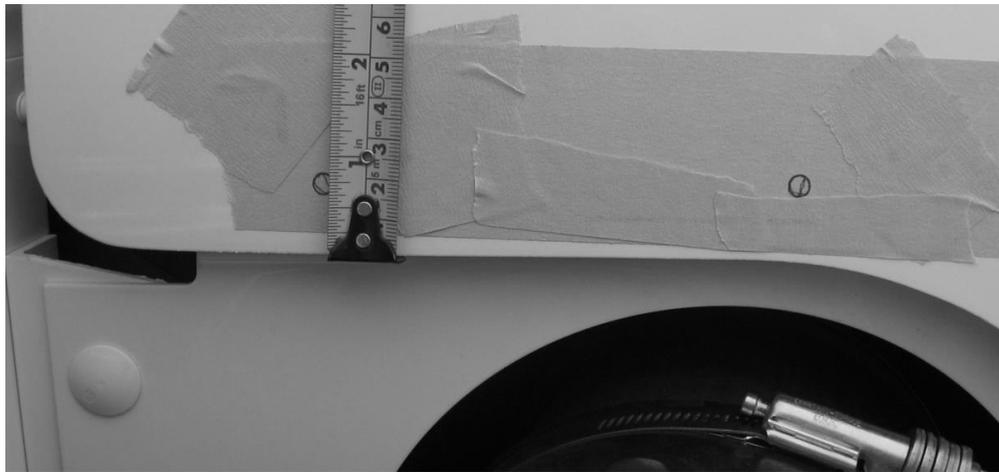

The two horizontal mounting holes should be marked on a shared horizontal centerline, $\frac{3}{4}$ " from the edge of the hood above the intake boot as shown above.

Page 1 of 3

11192020



United Pacific

Reliable. Hardworking. Quality Products.



Measure and mark the horizontal placement of these holes on the previously mentioned centerline. The first hole will be located at 3-1/8" from the rear edge of the hood, while the second will be located at 7-3/4" from the rear edge of the hood.

- In order to determine the drilling location of the remaining two mounting holes, hold the shroud against the side of the hood lining up the holes in the horizontal flange with the previously marked locations. Transfer the hole locations from the 2nd flange of the shroud to the masking tape using a pen. (a 2nd person can make this process easier)



Important:

Prior to drilling any of these holes, please check for clearance around the reinforcement of the hood. The hood has a reinforcement rib on the inside at the location shown below.



Using your fingers, feel around the back (inside) of this location prior to drilling to ensure that your marked location is still outside this rib. If your marked location is not outside this rib, you may not have access to the bolt to install a nut on the back side after you drill the hole. As a guideline, this hole should be 1-1/16" from the circular edge of the hood.

- Open the hood and proceed to drill your marked hole locations using a 9/32" diameter drill bit.
- Peel off protective PVC plastic from the flanges of the shroud, and mount using the supplied hardware.
- Repeat marking and mounting procedure for the opposite side. Complete installation by removing the remainder of the plastic off the shrouds, and clean with glass cleaner if necessary.

OPTIONAL STEP:

We will include black rubber edge guard with your shrouds. We recommend that you apply this edging to the outside edge of your shrouds as a safety precaution. This will prevent potential scrapes when using the hood latch straps.



United Pacific

Page 3 of 3

11192020

Reliable. Hardworking. Quality Products.