


# Stainless Steel Accessories


## Window shade, kenworth t660, t800 installation instructions Universal bug

11/19/2020

1. Please note this part may be secured with two sided tape only, however fastening with supplied hardware (steps 2-4) is highly recommended.
2. Line up vent shade to follow contour of door as shown and mark holes for future drilling (access is difficult, marking may require a hook shaped scriber)
3. Set window shade aside and drill through marked holes with  $\text{Ø}1/4''$  drill bit.
4. Fasten with supplied hardware as shown.

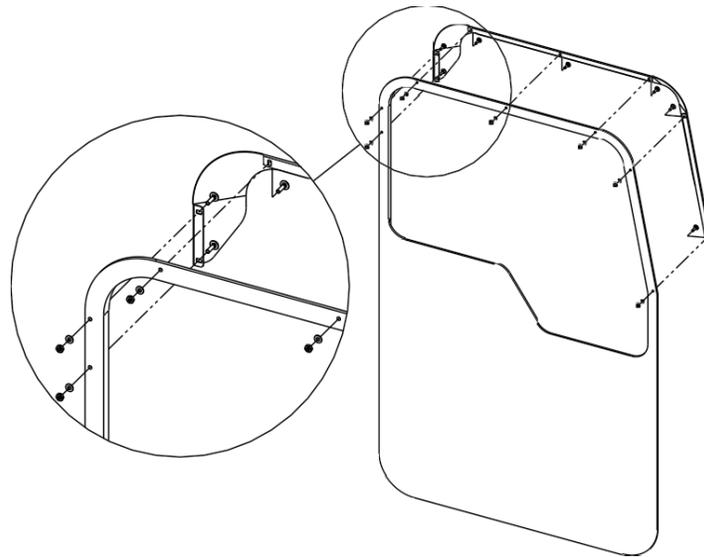

Driver side shown, use reverse orientation for passenger side

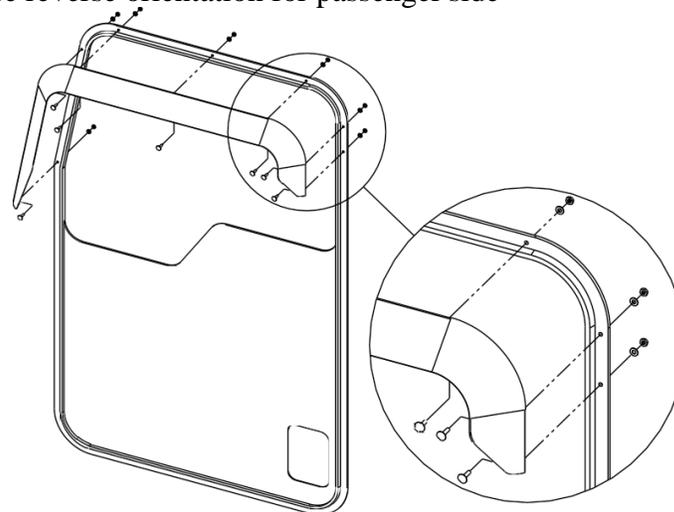

Page 1 of 1

11192020



**United Pacific**

*Reliable. Hardworking. Quality Products.*