



# GEARSHIFT KNOB MOUNTING INSTRUCTION

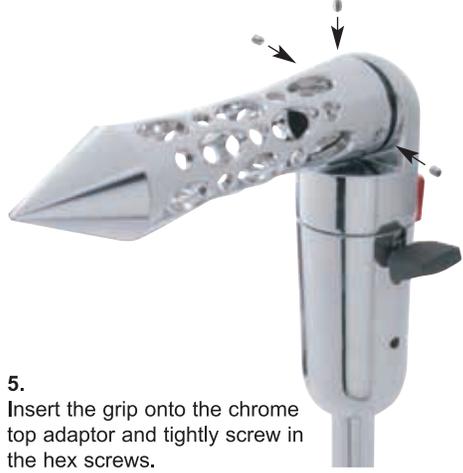

## “Daytona” and “Vegas” Gearshift Knob - Horizontal Mount

<p><b>1.</b> Remove screws and gearshift knob off OE gearshift. Be careful not to lose any components from the inside of the OE gearshift.</p> 	<p><b>2.</b> Unscrew the 2 large vertical mounted hex screws. Remove the chrome top adaptor from the adaptor base.</p> 	
<p><b>3.</b> Screw the adaptor base onto the OE gearshift using OE screws.</p> 	<p><b>4.</b> Slide the chrome top adaptor onto the adaptor base. Tighten the chrome top to the bottom adaptor base with the hex screws.</p> 	

## “Daytona” and “Vegas” Gearshift Knob - Vertical Mount
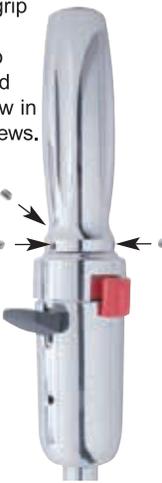
<p><b>1.</b> Remove screws and gearshift knob off OE gearshift. Be careful not to lose any components from the inside of the OE gearshift.</p> 	<p><b>4.</b> Slide the chrome top adaptor onto the adaptor base. Tighten the chrome top to the bottom adaptor base with the hex screws.</p> 
<p><b>2.</b> Unscrew the hex screw and remove the chrome top adaptor from the adaptor base.</p> 	<p><b>5.</b> Insert the grip onto the chrome top adaptor and tightly screw in the hex screws.</p> 
<p><b>3.</b> Screw the adaptor base onto the OE gearshift using OE screws.</p> 	

## Gearshift Knob

<p><b>1.</b> Remove screws and gearshift knob off OE gearshift. Be careful not to lose any components from the inside of the OE gearshift.</p> 	<p><b>4.</b> Slide the chrome top adaptor onto the adaptor base. Tighten the chrome top to the bottom adaptor base with the hex screws.</p> 
<p><b>2.</b> Unscrew the hex screw and remove the chrome top adaptor from the adaptor base.</p> 	<p><b>5.</b> Insert the grip onto the chrome top adaptor and tightly screw in the hex screws.</p> 
<p><b>3.</b> Screw the adaptor base onto the OE gearshift using OE screws.</p> 	